

Nôsa®

Bath Installation Guide

Pre-Installation Preparation:

Before commencing the installation, it is essential to obtain the technical schematic of your selected Nôsa bath from our website's product detail page.


These drawings provide **crucial** information, including the precise measurements of the bath's base, the depth of the void beneath the bath, and the specific location for the waste fitting.

Waste Connector and Pipe Details:


Included with every Nôsa bath is a slim waste connector and a versatile pipe, designed to snugly fit the void beneath the bath and extend to your floor's base.

The flexible pipe's tip has a diameter of 40mm and can extend up to 850mm to facilitate easy installation.


Installation Steps:

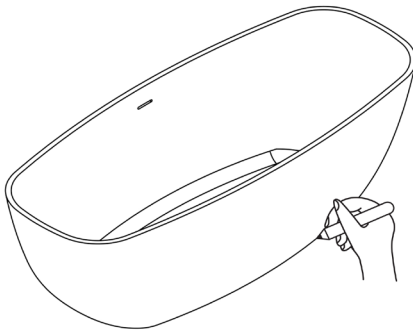


- Outline the bath base's dimensions on your floor.

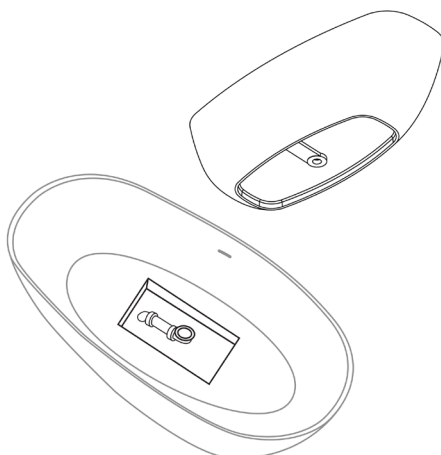


- Route your waste pipe up through the floor, within the outlined footprint.

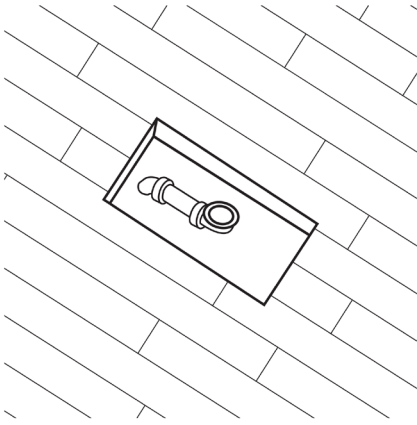


- Complete the floor's surface with your choice of covering or tiles.

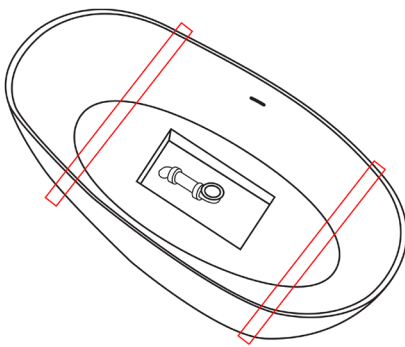

- Utilize two wooden supports, placed at each end of the bath, to elevate it for waste fitting connection.

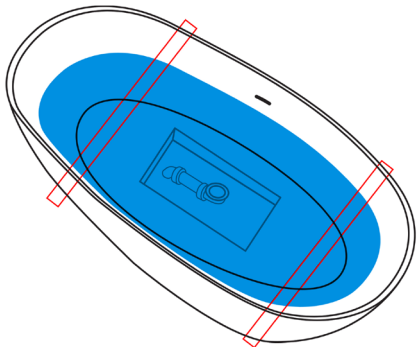


- After attaching the waste pipe to the trap, conduct a leak test by filling the bath halfway and then draining it.

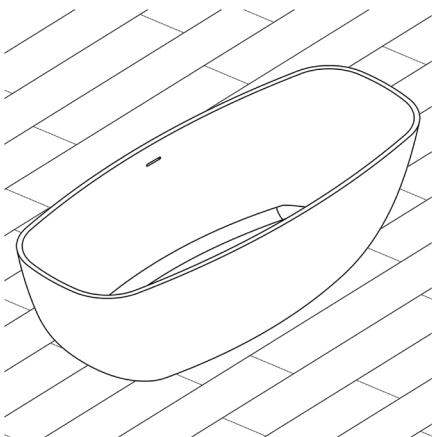


- If no leaks are found, remove the supports and position the bath permanently.

Installing your Nôsa Bath on Concrete Floors:


If modifying the concrete for waste pipe accommodation isn't feasible, follow these instructions:

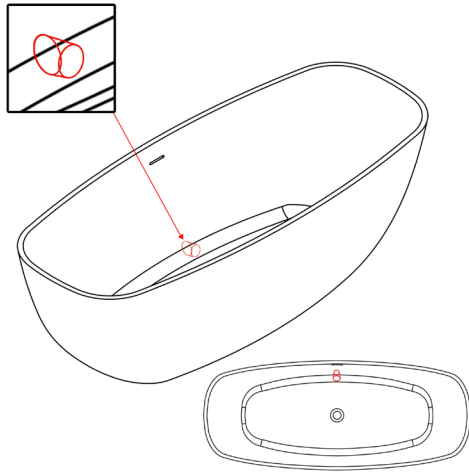


- Drill a 44mm hole using a hole saw attachment at the bath's base rear (this action won't affect your warranty).

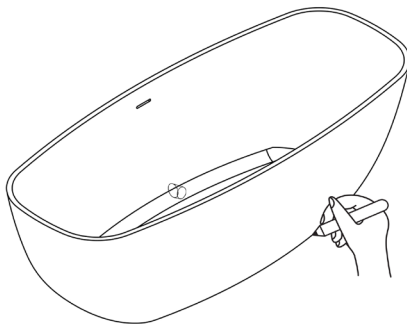


- Outline the bath's footprint as before.

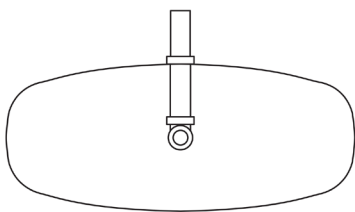


- Guide your waste pipe behind the bath and through the previously drilled hole.

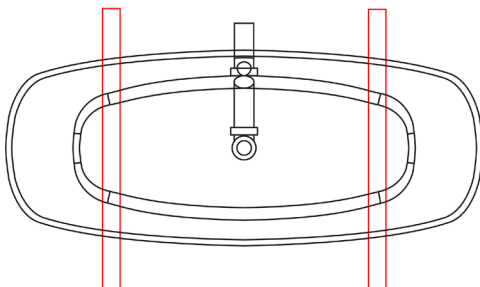

- Elevate the bath on wooden beams to connect the waste fittings easily.

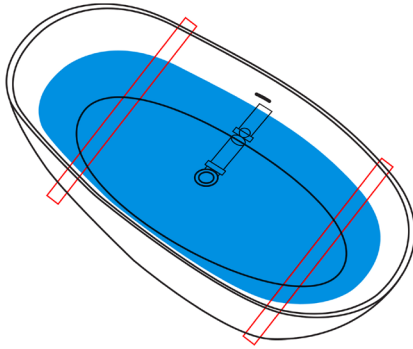

- Perform a leak test by filling the bath halfway and engaging the waste mechanism.

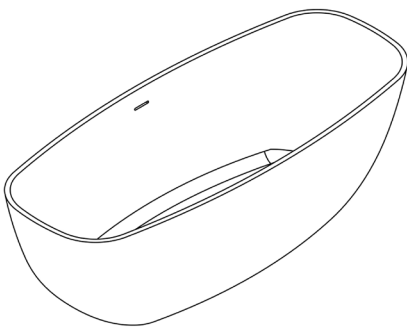

- Confirm the absence of leaks, remove the supports, and secure the bath in place.

Recommendations and Caution:

Our waste pipes are compatible with all standard British bath traps. However, we suggest opting for a HEPVO waterless trap with an inline adapter for optimal performance, available at leading plumbing and DIY outlets.

IMPORTANT:

A flexible connection is included with our baths to simplify installation. This should be attached carefully to the initial threads of the bath waste to prevent damage, ensuring not to over-tighten.

By adhering to these guidelines, installing your Nôsa bath will be straightforward, ensuring a luxurious addition to your bathroom that combines elegance with functionality.