

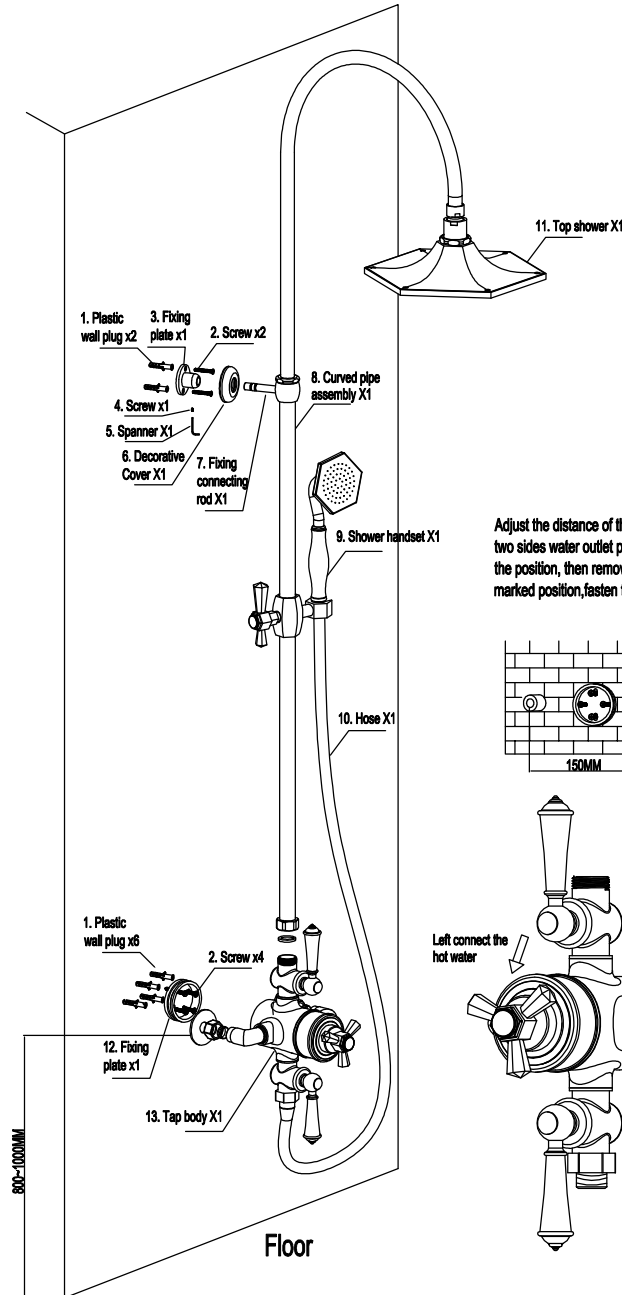


Installation instruction

1. Check all components are present before installation.
2. Adjust the distance of the tap elbows, Place the elbows into the two sides water outlet pipes. Attach the tap body to the wall, mark the position, then remove the tap body, put fixing plate on the marked position, fasten the fixing plate by the screws.
3. Place the (NO.13) tap body into the (NO.12) fixing plate. Then tighten the locking nuts by spanner. Finally, use the grub screw to fix the tap. Tighten the screw by small hex spanner.
4. Connect the (NO.8) curved pipe assembly to the tap body
5. Place the fixing connecting rod (7) into the fixing plate (3), and install the fixing plate (3) to the wall, then mark the position of the screw holes, Drill holes in marking place with electric drill and insert the plastic wall plugs (1), fix the fixing plate (3) to the wall with self-tapping screw (2), then insert the fixing connecting rod (8), tighten the screw with spanner, and then install the (NO.6) decorative cover.
6. Install the (NO.10) hose and the (No.9) shower handset, and put the (NO.9) shower handset on the open slot of the bracket, then install the (No.11) top shower.
7. Open the water supply valve, Check all joints and connections for leaks.

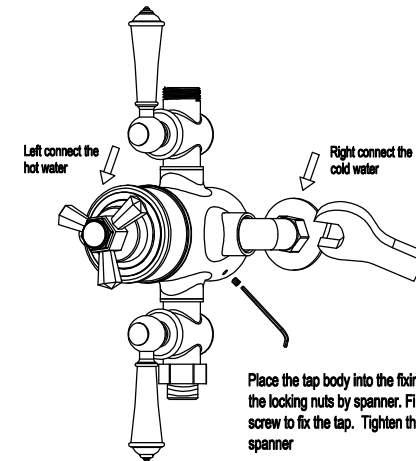

Adjust the distance of the tap elbows, Place the elbows into the two sides water outlet pipes. Attach the tap body to the wall, mark the position, then remove the tap body, put fixing plate on the marked position, fasten the fixing plate by the screws.

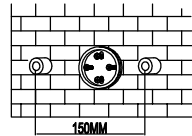

Place the tap body into the fixing plate. Then tighten the locking nuts by spanner. Finally, use the grub screw to fix the tap. Tighten the screw by small hex spanner

